 
 


## 4.2 Video Play Screen

Once a video clip is playing you can touch any part of the screen to bring up the control buttons, which will then appear as a band across the bottom of the screen. This band will disappear after 3 seconds of inactivity.

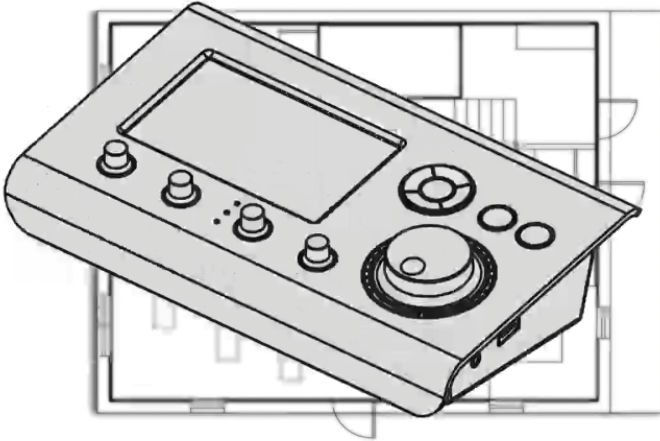

Following is the order that the selections appear:



Displays the current play time



Pause: Touch this icon to pause the video. When the pause icon is selected the icon changes to play



Play: Touch this icon to play the video. When the play icon is selected the icon changes to pause



Last Video: Touch this icon to play the last video



Fast Rewind: Touch this icon to rewind the video



 
Fast Forward: Touch this icon to move forward in the video



Next Video: Touch this icon to move to the next video



Video Setting: Touch this button to bring up the Video Setting window (refer below). You can also bring up this window by selecting the MENU button (11) whilst a video is playing.




Displays the total length of the video




the video

Progress bar: You can press and drag to 'scrub' through

### 4.3 Video Settings

 If you select , or press the MENU button (11) while a video is being played, the Video Settings window will be displayed.

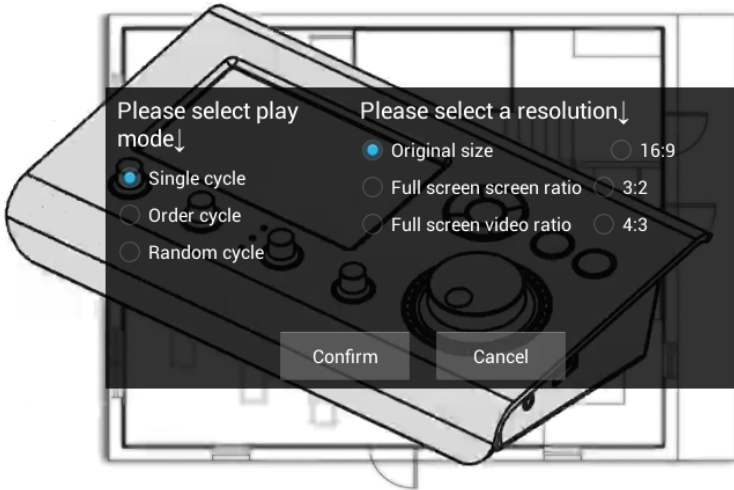

The Video Settings window allows you to make choices about the Play Mode, the Resolution and the Aspect Ratio. Touch your preference to activate your choice. When you have made your selection the circle will be filled with a blue dot. Press the Confirm button to activate.

Please choose the best resolution to match your Display Device.

Following is the order that the selections appear:


- Single cycle Continues to replay only the selected video
- Order cycle Each of the videos will continue to play sequentially
- Random cycle Video will continue to play in a random order
- Original size Video will play in its original format
- Full screen screen ratio Video will be scaled to fit the screen size
- Full screen video ratio Video will be scaled to maximize the screen size
- 16:9 Used to set the aspect ratio to 16:9 format
- 3:2 Used to set the aspect ratio to 3:2 format
- 4:3 Used to set the aspect ratio to 4:3 format
- Pressing the Confirm button will ensure your selections are saved and applied
- Pressing Cancel will ignore any selections you have made and return the player to the previous choices

## 5.0 MUSIC SCREEN
 
### 5.1 Music Standby Screen

To select the Music folder you need to press the Music icon on the Main Screen, or use the navigation control keys (10) to select the Music Folder and then press the ▶/|| (Play/Pause) button.

Once you enter the Music folder you will see the Standby Screen.

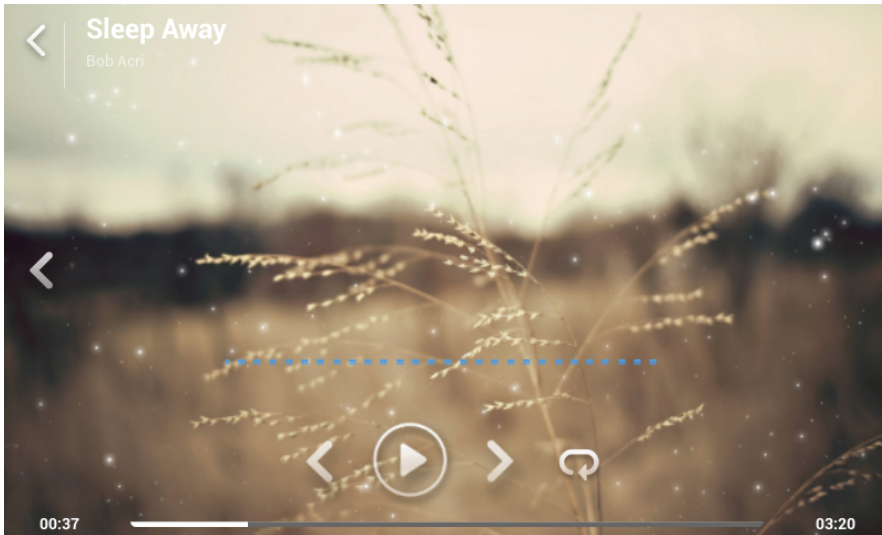

On the Standby Screen there are a number of icons available to navigate.




**Return:** Located in the upper left corner; selecting this icon will return you to the Main Screen. You can also press the BACK button (12) to go back to the Main Screen.



**Music Catalog:** Located in the middle on the left of the screen; selecting this icon will bring up the Music Catalog. (Please refer below)


### 5.2 Path Selection for Music Play

 If you press the MENU button (11) when the Standby Screen is being displayed, the Path Selection options are displayed.

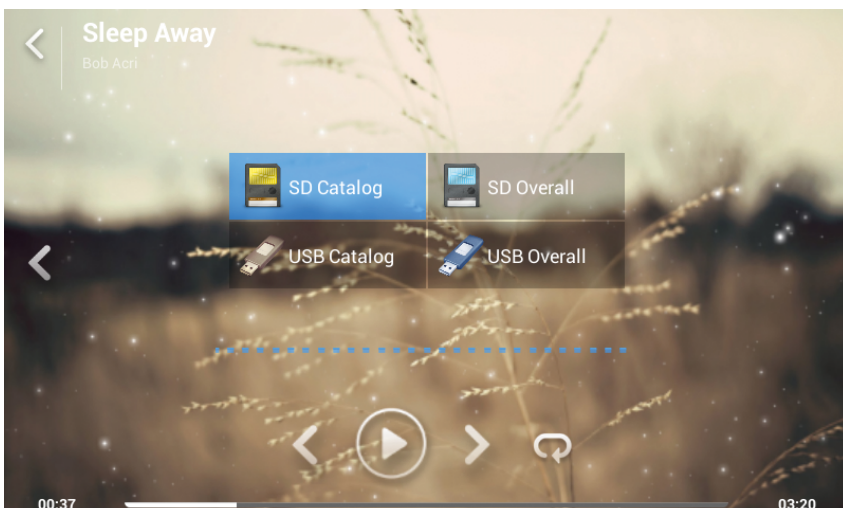




 
Selecting the SD Catalog will display a list of all the music files located on the internal memory card



 Selecting the SD Overall will display a list of all the music files located on the internal memory card




 
Selecting the USB Catalog will display a list of all the music files located on the USB card




Selecting the USB Overall will display a list of all the music files available for play, located on the USB card

### 5.3 Music Catalog

  
This list of Music that is stored on a device can be accessed by pressing the middle arrow  on the left of the screen. You can also place your finger on the screen and swipe to the right. Once the titles appear on the screen you can scroll up and down.

 To return to the Standby Screen you can either press the right arrow  in the middle, or place your finger on the screen and swipe to the left.

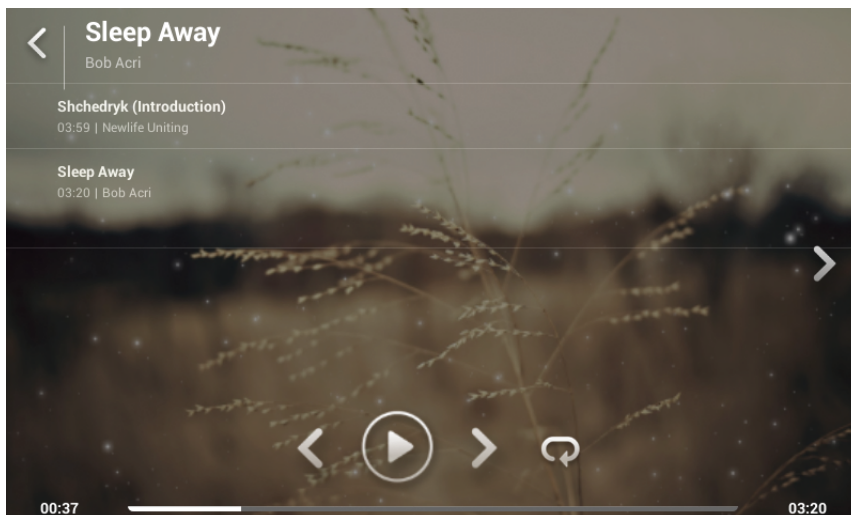


### 5.4 Music Play Screen

 
The Standby Screen will change once you begin playing a track.

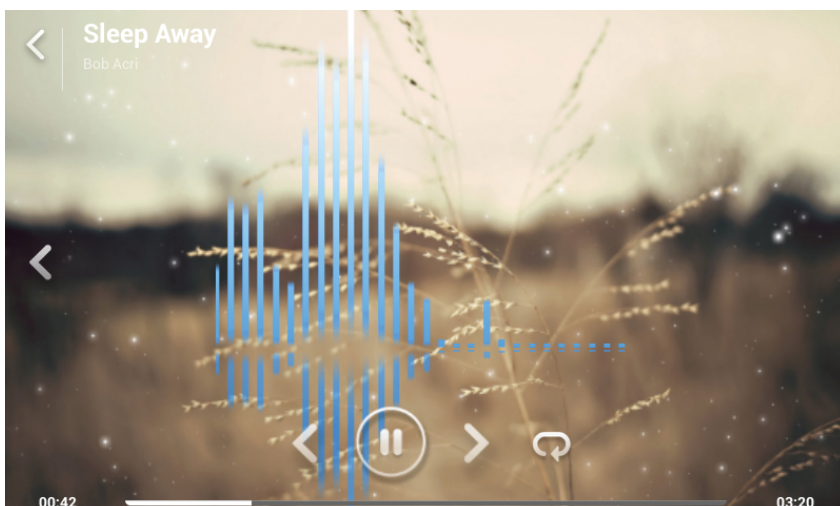



Following is an explanation of the available icons to control Music replay:


 Display of the song title and artist currently playing

 Play: Touching this icon will commence a song being replayed. Once pressed this icon will change to the Pause icon. You can also use the PLAY/PAUSE button


 Pause: Touching this icon whilst a track is playing will Pause the replay. Once pressed this icon will change to the Play icon. You can also use the ►/|| (Play/Pause) button


 Last Song: Touching this icon will return the Play to the previous track

 Next Song: Touching this icon will move the Play forward to the next track


 Replay: With this icon displayed, all tracks in list will be played in order and then repeated.


By pressing this icon you can scroll through the other replay options

 Replay 1: With this icon displayed, only the track playing will be repeated

 Random: All the tracks available from the list selected will be played in a random order

  Progress bar: You can press and drag to 'scrub' through the current track.

 Displays the current playback time

 
 Displays the total track time

## 6.0 PICTURE SCREEN
 
### 6.1 Picture Selection Screen


To select the Picture folder you need to press the Picture icon or use the navigation controls (10).

Once you enter the Picture folder you will see the Picture Selection Screen.

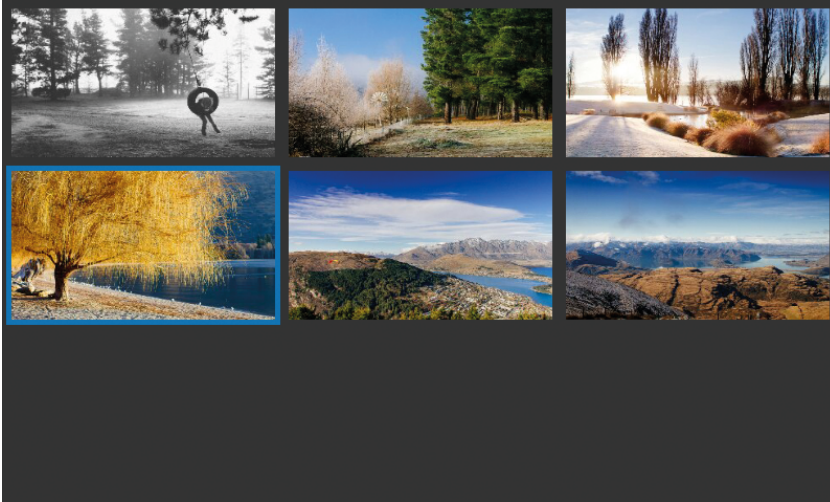


By touching a picture you can bring it up on the display panel.

 
If you press the MENU button (11) when the Picture Selection Screen is being displayed, the Catalog Selection options are displayed.

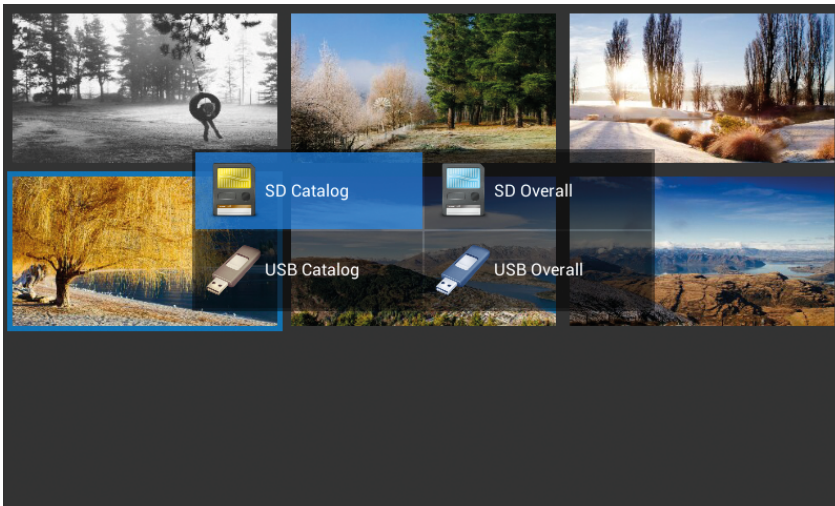

 
Selecting the SD Catalog will display a list of the entire picture files located on the internal memory card



 Selecting the SD Overall will display a list of all the picture files located on the internal memory card



 Selecting the USB Catalog will display a list of the entire picture files located on the USB card



Selecting the USB Overall will display a list of the entire picture files located on the USB card