 


# OPERATION MANUAL

## T6221

 
COMMERCIAL SERIES | CD/MP3 Player

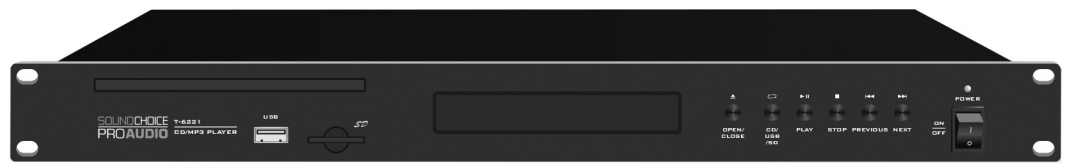

Please follow the instructions in this manual to obtain the optimum results from this unit.  
We also recommend that you keep this manual handy for future reference.


# TABLE OF CONTENTS

---



1.	Safety Precautions	3
2.	Attention	4
3.	General Description	5
4.	Features	5
5.	Functions (Front & Rear panel)	6
6.	Remote Control	7
7.	CD Operation	8
8.	Applications	9
9.	Specifications	10
10.	Installing Method	11

# 1. SAFETY INSTRUCTIONS

 

- Be sure to read through all the instructions in this Manual before using the product.
- Please ensure that you observe the instructions in this Manual, especially those highlighted by Safety Symbols and Safety Messages.
- Please retain this Manual in a safe place for future reference.

## Safety Symbol and Safety Message Conventions

The Safety Symbols and Safety Messages described below have been included in this Manual to prevent possible bodily injury and property damage which could result from mishandling. Please read through this Manual and become familiar with all Safety Symbols and Safety Messages, before operating this product.



### WARNING

Indicates a potentially hazardous situation which, if mishandled, could result in death or serious personal injury.



### CAUTION

Indicates a potentially hazardous situation which, if mishandled, could result in moderate or minor personal injury, and/or property damage.



### WARNING

 
#### When Installing the Unit

- Do not expose the unit to rain or an environment where it may be splashed by water or other liquids, as doing so may result in fire or electric shock.
- Use the unit only with the voltage specified on the unit. Using a voltage higher than that which is specified may result in fire or electric shock.
- Do not cut, kink, or otherwise damage, nor modify the power supply cord. In addition, avoid using the power cord in close proximity to heaters, and never place heavy objects -- including the unit itself -- on the power cord, as doing so may result in fire or electric shock.
- Be sure to replace the unit's terminal cover after connection completion. Because high voltage is applied to the speaker terminals, never touch these terminals to avoid electric shock.
- Be sure to ground to the safety ground (earth) terminal to avoid electric shock. Never ground to a gas pipe as a catastrophic disaster may result.
- Avoid installing or mounting the unit in unstable locations, such as on a rickety table or a slanted surface. Doing so may result in the unit falling down, causing personal injury and/or property damage.

#### When the Unit is in Use

- Should any of the following irregularities be found during use, immediately switch off the power, disconnect the power supply plug from the AC outlet and contact your nearest Sound Choice dealer. Make no further attempt to operate the unit in this condition as this may cause fire or electric shock.
  - If you detect smoke or a strange smell coming from the unit.
  - If water or any metallic object gets into the unit
  - If the unit falls, or the unit case breaks
  - If the power supply cord is damaged (exposure of the core, disconnection, etc.)
  - If it is malfunctioning (no tone sounds.)
- To prevent a fire or electric shock, never open nor remove the unit case as there are high voltage components inside the unit. Refer all servicing to your nearest Sound Choice dealer.
- Do not place cups, bowls, or other containers of liquid or metallic objects on top of the unit. If they accidentally spill into the unit, this may cause a fire or electric shock.
- Do not insert nor drop metallic objects or flammable materials in the ventilation slots of the unit's cover, as this may result in fire or electric shock.

## 2. ATTENTION



### CAUTION

#### When Installing the Unit

- Never plug in nor remove the power supply plug with wet hands, as doing so may cause electric shock.
- When unplugging the power supply cord, be sure to grasp the power supply plug; never pull on the cord itself. Operating the unit with a damaged power supply cord may cause a fire or electric shock.
- When moving the unit, be sure to remove its power supply cord from the wall outlet. Moving the unit with the power cord connected to the outlet may cause damage to the power cord, resulting in fire or electric shock. When removing the power cord, be sure to hold its plug to pull.
- Do not block the ventilation slots in the unit's cover. Doing so may cause heat to build up inside the unit and result in fire.
- Avoid installing the unit in humid or dusty locations, in locations exposed to the direct sunlight, near the heaters, or in locations generating sooty smoke or steam as doing otherwise may result in fire or electric shock.

#### When the Unit is in Use

- Do not place heavy objects on the unit as this may cause it to fall or break which may result in personal injury and/or property damage. In addition, the object itself may fall off and cause injury and/or damage.
- Make sure that the volume control is set to minimum position before power is switched on. Loud noise produced at high volume when power is switched on can impair hearing.
- Do not operate the unit for an extended period of time with the sound distorting. This is an indication of a malfunction, which in turn can cause heat to generate and result in a fire.
- Contact your Sound Choice dealer as to the cleaning. If dust is allowed to accumulate in the unit over a long period of time, a fire or damage to the unit may result.
- If dust accumulates on the power supply plug or in the wall AC outlet, a fire may result. Clean it periodically. In addition, insert the plug in the wall outlet securely.
- Switch off the power, and unplug the power supply plug from the AC outlet for safety purposes when cleaning or leaving the unit unused for 10 days or more. Doing otherwise may cause a fire or electric shock.

An all-pole mains switch with a contact separation of at least 3 mm in each pole shall be incorporated in the electrical installation of the building.

Due to product upgrades, some of the features and specifications in the user manual may not match the actual functions. We are sorry for any inconvenience this may cause, and thank you for your kind understanding.

## 3. GENERAL DESCRIPTION



This Sound Choice Pro Audio product fits into the Commercial Series range.

 
 
The T6221 is a 1U rack mounted integrated CD and MP3 player. This device is ideal for using in many audio installation locations. Its relatively small size and rack mounting makes it ideal for many permanent and 'on the road' systems.

## 4. FEATURES




1. The standard chassis design, 1U aluminium alloy panels, beautiful and practical
2. Microcomputer control, touch keys
3. High brightness VFD dynamic fluorescent display, clearly visible
4. Imported digital movement, system + ESS decoding, super error correction
5. Automatic playback controls
6. Can play: CD/VCD/MP3/DVD disc
7. Channel audio signal left and right channels (L/R) output

# 5. FUNCTIONS (Front & Rear Panel)

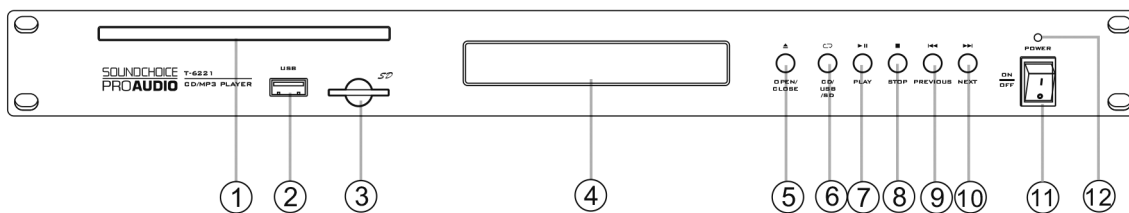

- 1. Disk slot  
CD and DVD disks can be loaded and unloaded through this slot
- 2. USB Interface
- 3. SD slot
- 4. CD Screen  
This displays the working state of this device
- 5. Open/Close
- 6. Operating Mode Selection Button
- 7. Play/Pause


 
- 8. Stop/Return  
Track search button (CD)
- 9. Previous  
Previous track search button (CD)
- 10. Next  
Next track search button
- 11. Power Switch  
Press 'I' to turn the power ON .  
Press 'O' to turn the power OFF
- 12. Power  
Power indicator

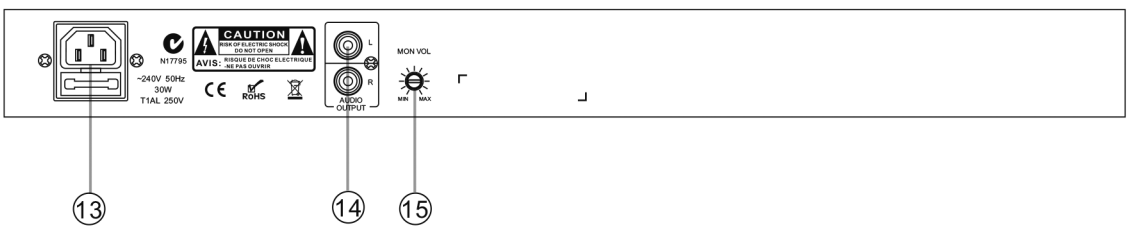

- 13. AC Power Input  
240V 50Hz
- 14. Audio Output  
1 pair of RCA sockets

- 15. Monitor Volume

## 6. REMOTE CONTROL

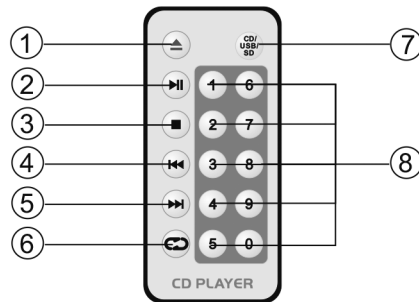  


- |                                  |   |
|----------------------------------|---|
| 1. In / Out positions            | 5. Next                                       |
| 2. Play / Pause / Confirm button | 6. CD Player operating mode selection button  |
| 3. Stop / Back button            | 7. SD / USB audio input mode selection button |
| 4. Last                          | 8. (0-9) Number control                       |

### Note:

 To select the track number press the corresponding number on the Remote Control. If number includes 2 or more digits then press these numbers on the Remote Control in sequence.

# 7. CD OPERATION



1. Press 'Power' switch to activate power to device
2. Button Function
3. Place Disks into tray with top up
4. Press key 'open/close' tray to close and read disk
5. Play disk



- ▶ || Play / Pause
- Stop / Return
- ◀◀ Previous
- ▶▶ Next

6. Playing a CD  
Place disk into the slot and allow unit to read contents. Then using either the buttons on the front of the unit, or on the Remote Control determine which action you want.


By using the various buttons you can negotiate through the various tracks to determine which one to play.



# 8. APPLICATIONS

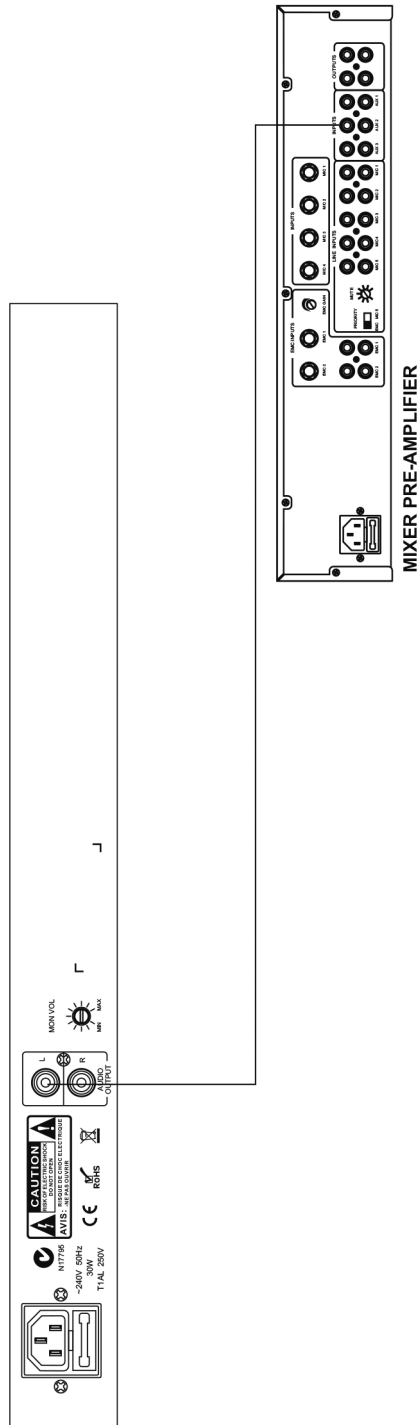  


## 9. SPECIFICATIONS



 


MODEL	T6221
Frequency Response	20Hz-20KHz (-1.5dB)
Power Requirements	240V 50Hz
Power Consumption	30W
Dimensions (mm)	484(D) x 220(W) x 44(H)
Weight	3.6Kg

# 10. INSTALLING METHOD

 

Unit: mm

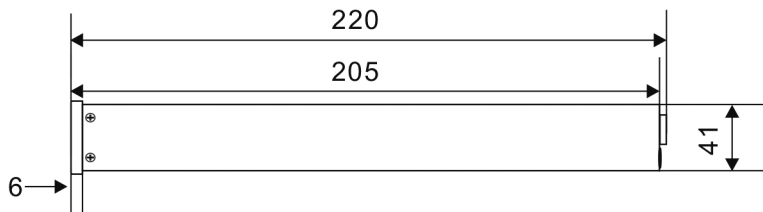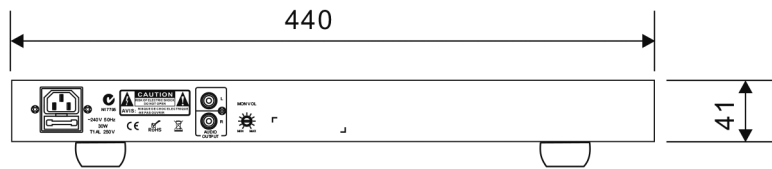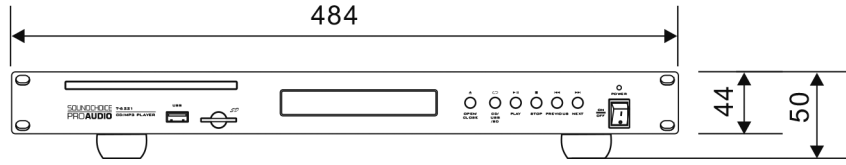   

**NOTE:** Please ensure that the unit has at least a 10cm gap from any object on all sides, so as not obstruct the air flow and cause the unit to overheat.

