



MIXX16 Digital mixer and IPAD via LAN connection.

- 1, Turn on the digital mixer and IPAD, connect WIFI to M16.8.
- 2, Open the IPAD browser and enter **10.10.100.254** , and then enter the setting interface. (Login account - password is **admin**)
- 3, Select **STA Interface Setting** tab

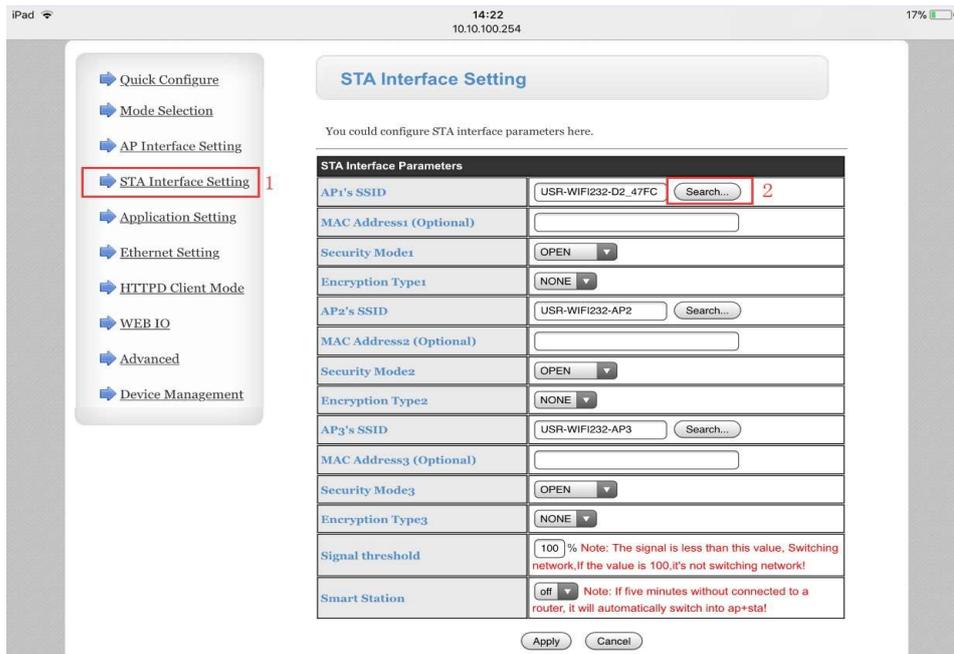

- 4, Press Search(2) Choose mixer that you require to join the local area network (LAN). (For example, choose **Relacart**) from site survey, and then press **APPLY** .

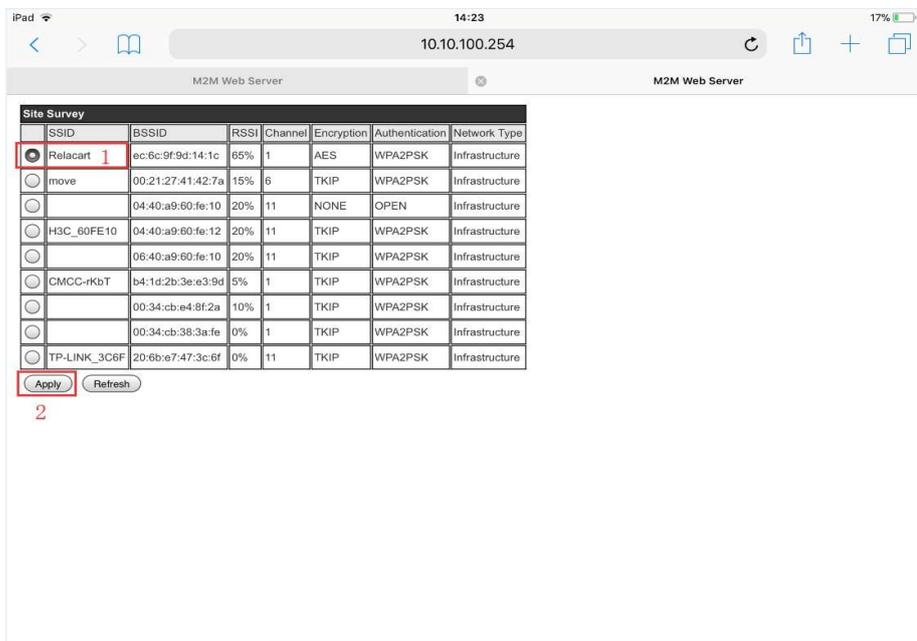

5, Enter the WIFI password. (PS: Do not press at the prompt to "Restart Module"
Please continue next step.

STA Interface Parameters	
AP1's SSID	Relacart Search...
MAC Address1 (Optional)	
Security Mode1	WPA2PSK
Encryption Type1	AES
Pass Phrase1	re220230
AP2's SSID	USR-WIFI232-AP2 Search...
MAC Address2 (Optional)	
Security Mode2	OPEN
Encryption Type2	NONE
AP3's SSID	USR-WIFI232-AP3 Search...
MAC Address3 (Optional)	
Security Mode3	OPEN
Encryption Type3	NONE
Signal threshold	100 % Note: The signal is less than this value, Switching network.If the value is 100,it's not switching network!
Smart Station	off Note: If five minutes without connected to a router, it will automatically switch into ap+sta!

6, After finishing the STA Interface setting, we need to set Mode Selection. Select STA Mode, and then press Apply.

Quick Configure
Mode Selection
AP Interface Setting
STA Interface Setting
Application Setting
Ethernet Setting
HTTPD Client Mode
WEB IO
Advanced
Device Management

Working Mode Configuration

You may configure the Uart-WIFI module wifi mode and data transfer mode.


AP Mode: Access Point

STA Mode: Station Mode

Data Transfer Mode: Transparent Mode

Apply Cancel

7, Select **Device Management** and then press **Restart (Restart Module)**.

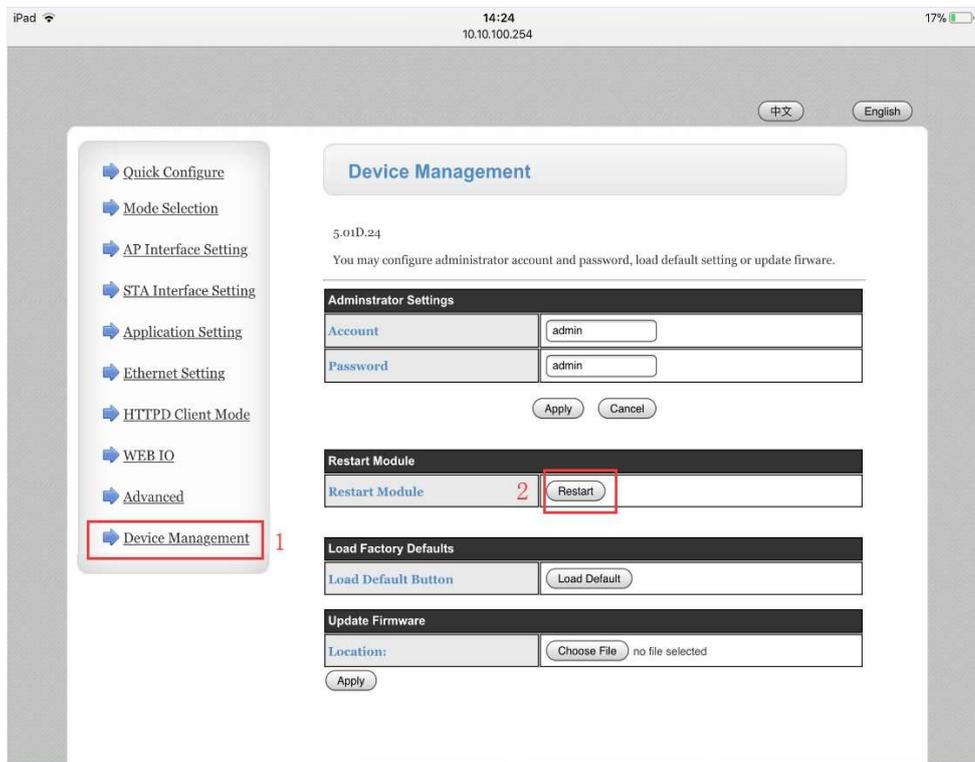

8, Return to iPad settings, select Relacart in the WLAN settings. This now joins the same local area network. (for example, use Relacart or the name you have selected). After finished all the settings, turn on the MIXX16 and IOS software.

